

FAWCETT

TRACTOR SUPPLY LTD.

HOW TO: MEASURE A RIM

When measuring a rim that has not tire on it, you will want to measure the width of the rim from the inside bead seats.

Refer to the diagram for the location of these.

Please take the time to also measure your rim's offset to the centre dish. It can be important to ensure what clearance your rim needs in order to clear the tractor.

The second width measurement will be from the outside of the rim from edge to edge in inches.

Make note of whether you have a one piece or two pieces rim that attaches to a separate centre dish with lugs.

In this case, we will need to know the number and style of lugs. Whenever you require a one piece rim or a centre dish, we will need to know the pilot hole diameter and number of bolts.

Lug Styles

